

Barwon

Hudson

Order Form: Barwon & Hudson Lift Chair

Prepared by

Client Name

Order Date

Reference No.

Circle required dimensions and configurations

CONFIGURATION

Mechanism	Single Motor (Standard)	Dual Motor	180kg Dual Motor RC	Electric Recline RC	Manual Recline RC
Wheels	50mm Castors (Standard)	75 Mobile Castors (+25mm Seat height)	Glides	Remove Castors	
Memory Foam	Seat	Legrest	Backrest	Armrest	Hygroflex
Back Cushion Options	Gluteal Recess	Concave Back	Blow-fill Lumbar	Comfort Pack	Heat & Massage
Cushion Insert	None (Standard)	18x16 Low Profile	18x16 High Profile	16x16 Low Profile	16x16 High Profile
Controller Option	Right (Standard)	Left	Double Pocket	Joystick	Controller Loop Left/Right
Back Angle	Standard	Vertical	Over-Vertical		
Other Options	Waterfall Arms	Scotch Guard	Flush Front		
	Tablet Arm Left/Right (default show wood removed)	Leg rest Side Walls			
	Full chair cover	Velcro armrest/headrest covers	Loose armrest/headrest covers	Fitted armrest/headrest covers	
	Removable Headrest A B C D E (please circle one)	24V Full Battery Backup			

DIMENSIONS

	Seat Depth (mm)	Seat Height (mm)	Back Height (mm)	Footrest Length (mm)	Scapular Height (mm)	Seat Width (mm)	Arm Height (mm)	Seat Foam (mm)
Decrease Size	-100 CP -150 CP	-30 RC	-120 CP -150 CP -180 CP	-50		-150	-60	
	-25 -50 -75	-25	-30 CP -60 CP -90 CP	-25		-50 -100	-30	-20
Mini Standard Size	455	456	636	N/A	429	540	199	N/A
Increase Size	+25 +50	+20	+30 +60 +90	+25		+50	+30	+20
	+75		+120 +150 DM	+50			+60	
Decrease Size	-100 -150 CP	-30 RC	-120 CP -150 CP -180 CP	-50		-150	-60	
	-25 -50 -75	-25	-30 -60 CP -90 CP	-25		-50 -100	-30	-20
A Standard Size	490	476	647	N/A	440	540	180	N/A
Increase Size	+25 +50	+20	+30 +60 +90	+25		+50	+30	+20
	+75		+120 DM +150 DM	+50			+60	
Decrease Size	-100 -150 CP	-30 RC	-120 CP -150 CP -180 CP	-50		-150	-60	
	-25 -50 -75	-25	-30 -60 -90 CP	-25		-50 -100	-30	-20
B Standard Size	520	496	688	N/A	481	540	190	N/A
Increase Size	+25	+25	+30 +60 DM +90 DM	+25		+50	+30	+20
	+50		+120 DM +150 DM	+50			+60	
Decrease Size	-100 -150	-30 RC	-120 CP -150 CP -180 CP	-50		-150	-60	
	-25 -50 -75	-25	-30 -60 -90	-25		-50 -100	-30	-20
C Standard Size	545	546	718	N/A	511	540	190	N/A
Increase Size	+25	+25	+30 DM +60 DM	+25		+50	+30	+20
		+50	+90 DM +120 DM	+50			+60	

NOTE: Reduced seat foam limits Safe working load to 90kg and reduces seat foam warranty to 2 years.

* DM = Dual Motor Only * RC = Remove Castors -30mm Seat Height * CP = Not compatible with Comfort Pack

COLOUR AND FINISH


Fabric	Inner	
	Outer	
Show wood	Walnut	Mahogany
	Baltic	Teak
	Remove Show Wood	

ADDITIONAL NOTES



Chair Sizing

OUR RECOMMENDED STARTING POINT

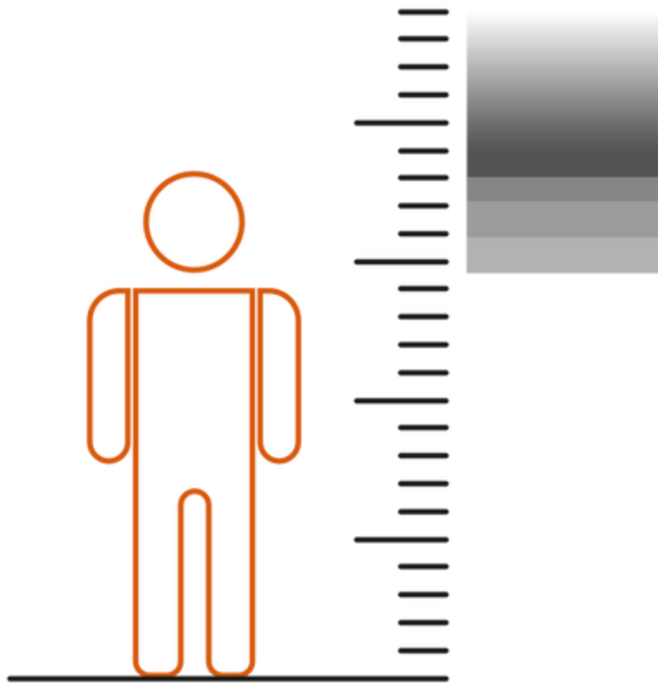

C	5'11+	180cm+
B	5'8 to 5'11	172 to 180cm
A	5'2 to 5'8	157 to 172cm
Mini	4'10 to 5'2	147 to 157cm

ENSURING CORRECT MODIFICATIONS



Seat Depth

- Heels up against the footrest
- Light pressure on the calf
- Feet planted on the ground, avoid legs angled too far forward
- Mention gluteal recess if user unable to sit back into the chair



Back Height

- Nape of the neck sitting in centre of top cushion
- Shoulder blades sitting in gap of the top roll
- Adjustments can be made manually by repositioning backrest



Seat Height

- Knees in line with hips
- Feet planted on the ground
- Even pressure from their backside to the back of their legs
- Use blocks to determine adjustment if feet don't reach the ground



Arm Height

- Elbow to wrist should be supported
- If shoulders are hunched up, arms too high
- Gap between armrest and elbow, arms too low



Seat Width

- Fit a fist beside each thigh comfortably
- Waterfall arms can also decrease seat width



Footrest Length

- Heel clear of footrest to avoid pressure sores
- Ankles to be supported