



Order Form: Barwon Lift Chair

Prepared by				
Client Name				
Order Date	. .	Ref no.		
OT's Name				
OT's Email				
Funding Option	☐ Aged Care	☐ NDIS	☐ Self	
	☐ Other (Specify)			

CONFIGURATION

Essentials	☐ Dual Motor	☐ 180kg Dual Motor ^{RC}	☐ Single Motor	☐ Manual Recline ^{RC}		
	☐ Comfort Pack	☐ Heat & Massage ^{CP}	☐ 24 Volt Battery	☐ Tilt in Space		
Wheels	☐ 50mm Castors (Standard)	☐ 75 Mobile Castors (+25mm Seat height)	☐ Glides	☐ Remove Castors (in Factory)		
Memory Foam	☐ Seat	☐ Legrest	☐ Backrest	☐ Armrest	☐ Hygroflex	
Back Cushion Options	☐ Gluteal Recess	☐ Concave Back	☐ Blow-fill Lumbar ^{CP}			
Cushion Insert	☐ None (Standard)	☐ 18x16 Low Profile	☐ 18x16 High Profile	☐ 16x16 Low Profile	☐ 16x16 High Profile	☐ Include Infill Plug
Controller Option	☐ Right (Standard)	☐ Left	☐ Double Pocket	☐ Controller Loop Left / Right		
Back Angle	☐ Standard	☐ Vertical	☐ Over-Vertical			
Other Options	☐ Waterfall Arms	☐ Scotch Guard	☐ Flush Front			
	☐ Meal Tray Left/Right (default show wood removed)		☐ Leg rest Side Walls			
	☐ Full chair cover	☐ Velcro armrest headrest covers	☐ Loose armrest/headrest covers	☐ Fitted armrest/headrest covers		
	☐ Removable Headrest A B C D E (please circle one)		☐ 24V Full Battery Backup			

COLOUR AND FINISH

Fabric				
Inner		Outer		
Show wood				
☐ Walnut	☐ Mahogany	☐ Baltic	☐ Teak	☐ Remove Show Wood



Order Form: Barwon Lift Chair

Circle required dimensions and configurations

DIMENSIONS

Size	Seat Depth (mm)	Seat Height (mm)	Back Height (mm)	Footrest Length (mm)	Scapular Height (mm)	Seat Width (mm)	Arm Height (mm)	Seat Foam (mm)
Decrease Size	-100 CP -25 -150 CP -50 -75	-36 MM -25 RC	-120 CP -150 CP -180 CP -30 CP -60 CP -90 CP	-50 -25		-150 -50 -100	-60 -30	-20
Mini	455	456	636	N/A	429	540	199	N/A
Increase Size	+25 +50 +75	+20	+30 +60 +90 +120 +150 DM	+25 +50		+50	+30 +60	+20

Decrease Size	-100 -25 -150 CP -50 -75	-25 RC	-120 CP -150 CP -180 CP -30 CP -60 CP -90 CP	-50 -25		-150 -50 -100	-60 -30	-20
A	490	476	647	N/A	440	540	180	N/A
Increase Size	+25 +50 +75	+20	+30 +60 +90 +120 DM +150 DM	+25		+50	+30 +60	+20

Decrease Size	-100 -25 -150 CP -50 -75	-25 RC	-120 CP -150 CP -180 CP -30 CP -60 CP -90 CP	-50 -25		-150 -50 -100	-60 -30	-20
B	520	496	688	N/A	481	540	190	N/A
Increase Size	+25 +50	+25	+30 +60 DM +90 DM +120 DM +150 DM	+25		+50	+30 +60	+20

Decrease Size	-100 -25 -150 -75	-25 RC	-120 CP -150 CP -180 CP -30 CP -60 -90	-50 -25		-150 -50 -100	-60 -30	-20
C	545	546	718	N/A	511	540	190	N/A
Increase Size	+25	+25 +50	+30 DM +60 DM +90 DM +120 DM	+25 +50		+50	+30 +60	+20

ADDITIONAL NOTES

NOTE:

- * Reduced seat foam limits Safe working load to 90kg and reduces seat foam warranty to 2 years.
- * Seat width decrease will automatically come with waterfall arms.
- * Castors can only be removed in factory.
- * Reduced seat width adds Waterfall arms.
- * Fusion fabrics only available in 2-Tones.
- * Full chair cover and Fitted arm covers not compatible with Waterfall arms.
- * Blow-fill lumbar not available with memory foam back.

* MM - Micro Mini

- * Select the following: Cushion insert, Controller option, memory foam.
- * Gluteal recess and concave back are the only available back cushion options.

* Prescriber / OT = not compulsory for completion


* RC = Remove Castors -25mm Seat Height

* CP = Not compatible with Comfort Pack

* DM = Dual Motor Only

Chair Sizing

OUR RECOMMENDED STARTING POINT

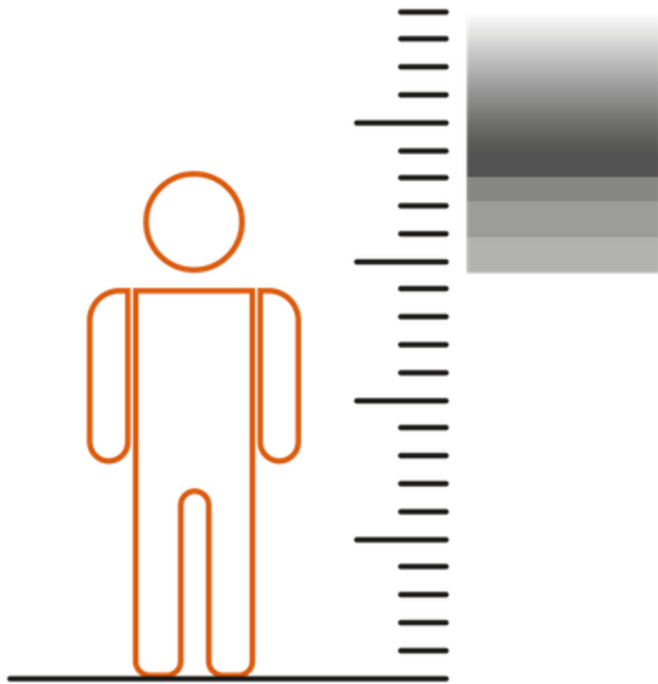

C	5'11+	180cm+
B	5'8 to 5'11	172 to 180cm
A	5'2 to 5'8	157 to 172cm
Mini	4'10 to 5'2	147 to 157cm

ENSURING CORRECT MODIFICATIONS



Seat Depth

- Heels up against the footrest
- Light pressure on the calf
- Feet planted on the ground, avoid legs angled too far forward
- Mention gluteal recess if user unable to sit back into the chair



Back Height

- Nape of the neck sitting in centre of top cushion
- Shoulder blades sitting in gap of the top roll
- Adjustments can be made manually by repositioning backrest



Seat Height

- Knees in line with hips
- Feet planted on the ground
- Even pressure from their backside to the back of their legs
- Use blocks to determine adjustment if feet don't reach the ground



Arm Height

- Elbow to wrist should be supported
- If shoulders are hunched up, arms too high
- Gap between armrest and elbow, arms too low



Seat Width

- Fit a fist beside each thigh comfortably
- Waterfall arms can also decrease seat width



Footrest Length

- Heel clear of footrest to avoid pressure sores
- Ankles to be supported